

## QUICK SETUP GUIDE MZF APPLIANCE



### 2 LOCAL REQUIREMENTS:

- At least one free port on a switch
- At least one free IP-address on local network
- Power (110 / 230V)
- Configuration PC with LAN-Port

### 3 DEFAULT SETTINGS:

- LAN1: 192.168.44.70 (255.255.255.0)
- LAN2: DHCP
- WebUI: http://192.168.44.70:9998
- User: metasec
- Password: metasec

### 4 FIRST BOOT:

- Login: http://192.168.44.70:9998
- Setup network to local environment
- Setup passwords
- Check system time
- Update system to newest patchlevel




### DELIVERY CONTENT:

- 19" Appliance
- Power adapter
- Patch cables (red / black / green / yellow)
- Cage nuts and screws
- This manual



### REPLACEMENT PARTS:

- Power adapter (OrderNo. MZF-APWR)
- Appliance (OrderNo. MZF-A)



### QUESTIONS / SUPPORT:

- Call your authorized dealer
- Contact support via [support@metasec.de](mailto:support@metasec.de)
- Call support: +49 2302 / 98391080

### 1 HARDWARE:



### 5 SERVICE REBOOT:

- To ensure that everything works after power outage, do a reboot and double check all services
- Create a backup of the current configuration and download it
- Create a autodoc configuration file

### 6 SHUT DOWN/REBOOT:

- If possible always via webinterface
- Otherwise short press on the button in the front
- Reset: reset button in the front
- Long press on the power button in the front



Thank you for choosing the MZF Appliance from metaSEC. In this quick setup guide you will find everything you need to know for initial installation and rollout.

*If you still have questions, don't hesitate to contact our helpful support.*



### 7 IMPORTANT LINKS:

- [www.metasec.de](http://www.metasec.de)
- <https://wiki.metasec.de>
- [support@metasec.de](mailto:support@metasec.de)



## QUICK SETUP GUIDE MZF APPLIANCE



### GELIEFERTER INHALT:

- 19" appliance
- Netzteil
- Patchkabel (rot / schwarz / grün / gelb)
- Käfigmuttern und -schrauben
- Dieses Handbuch



### ERSATZTEILE:

- Netzteil (Bestellnummer: MZF-APWR)
- Appliance (Bestellnummer: MZF-A)



### FRAGEN / SUPPORT:

- Rufen Sie Ihren Fachhändler an
- Kontaktieren Sie den Support über [support@metasec.de](mailto:support@metasec.de)
- Support anrufen: +49 2302 / 98391080

## 2 LOKALE ANFORDERUNGEN:

- Mindestens ein freier Port an einem Switch
- Mindestens eine freie IP-Adresse im lokalen Netzwerk
- Spannungsversorgung (110 / 230V)
- Konfigurations-PC mit LAN-Port


## 3 STANDARDEINSTELLUNGEN:

- LAN1: 192.168.44.70 (255.255.255.0)
- LAN2: DHCP
- WebUI: <http://192.168.44.70:9998>
- Nutzer: metasec
- Passwort: metasec

## 4 INBETRIEBNAHME:

- Anmeldung: <http://192.168.44.70:9998>
- Netzwerk einrichten
- Kennwörter einrichten
- Systemzeit überprüfen
- System auf neueste Patchlevel aktualisieren

## 1 HARDWARE:

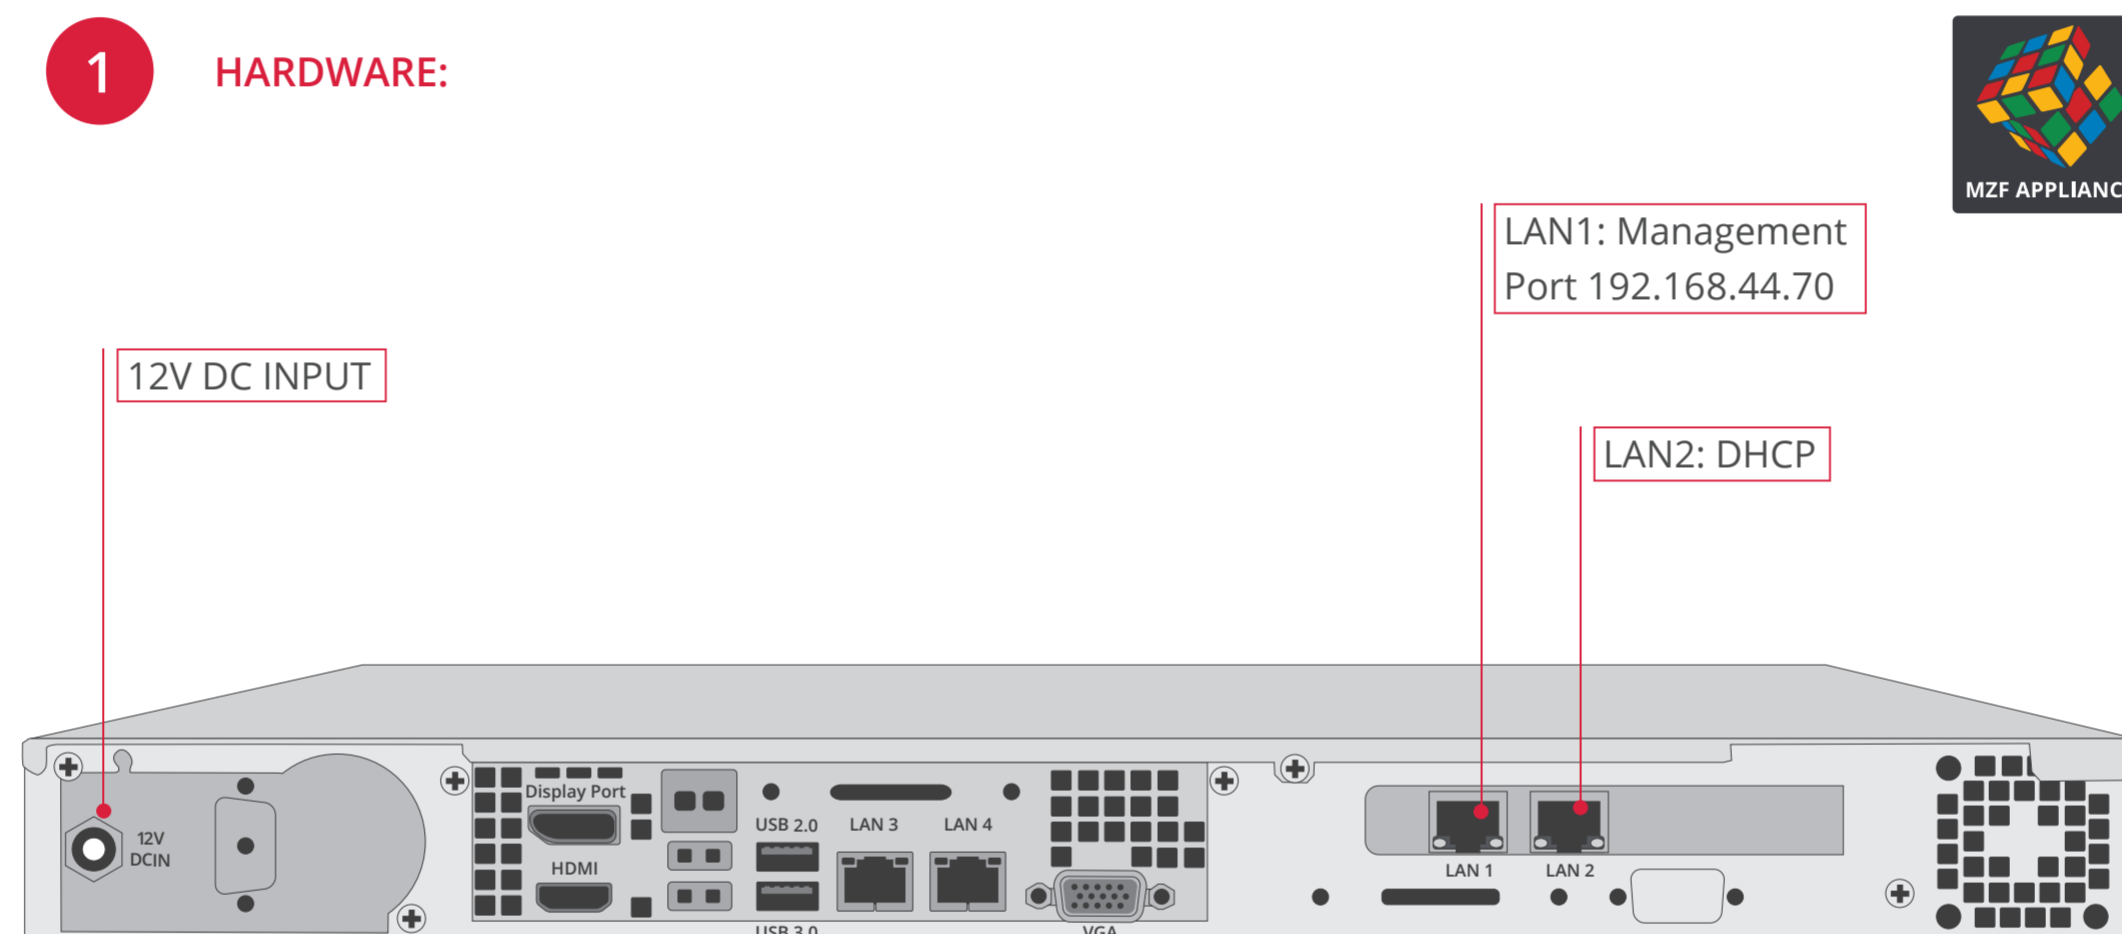

## 5 SERVICE-NEUSTART:

- Um sicherzustellen, dass nach einem Stromausfall alles funktioniert, starten Sie das Gerät neu und überprüfen Sie alle Dienste
- Erstellen Sie eine Sicherungskopie der aktuellen Konfiguration und laden Sie sie herunter
- Erstellen Sie eine Autodoc-Konfigurationsdatei

## 6 HERUNTERFAHREN / NEUSTART:

- Wenn möglich immer über das Webinterface
- Andernfalls kurzes Drücken der Taste auf der Vorderseite
- Reset: Reset-Taste auf der Vorderseite
- Langer Druck auf den Power-Knopf auf der Vorderseite



Vielen Dank, dass Sie sich für die MZF Appliance von metaSEC entschieden haben. In diesem Quick Setup Guide erfahren Sie alles was Sie für die Erstinstallation und Inbetriebnahme wissen müssen.

Wenn Sie noch Fragen haben, zögern Sie nicht, unseren Support zu kontaktieren.



## 7 WICHTIGE LINKS:

- [www.metasec.de](http://www.metasec.de)
- <https://wiki.metasec.de>
- [support@metasec.de](mailto:support@metasec.de)

